 



Assembly Instructions

ECOLIFE


MODEL : TV 8022-DARWIN SERIES TV CABINET

Part List		QTY
1	Top Panel	1
2	Side Panel (L)	1
3	Small Middle Panel	1
4	Big Middle Panel	1
5	Shelf Panel	1
6	Side Panel (R)	1
7	Door Panel (L)	1
8	Door Panel (R)	1
9	Bottom Panel	1
10	Back Panel	1
11	Metal Side Leg	2
12	Upper Metal Support	2
13	Lower Metal Support	1
14	Center Support Legs	2


Hardware		QTY
A	Allen Key M4 	1
B	Plastic Dowel M8 x 25 	16
C	Mini Fix Bolt 	8
D	Mini Fix Housing 	8
E	Mini Fix Cap 	8
F	JCBC W Screw M6x40 mm 	8
G	Door Rail Slider 	2
H	JCBC Screw M6x50 Flat & Spring Washers 	6
I	CSK Screw M4x32mm 	8
J	Upper Door Slider 	4
K	Bottom Door Slider 	4
L	CSK Screw M3.5x16mm 	24
M	Metal Shelf Support 	4
N	Nail 	50
O	Handle 	2

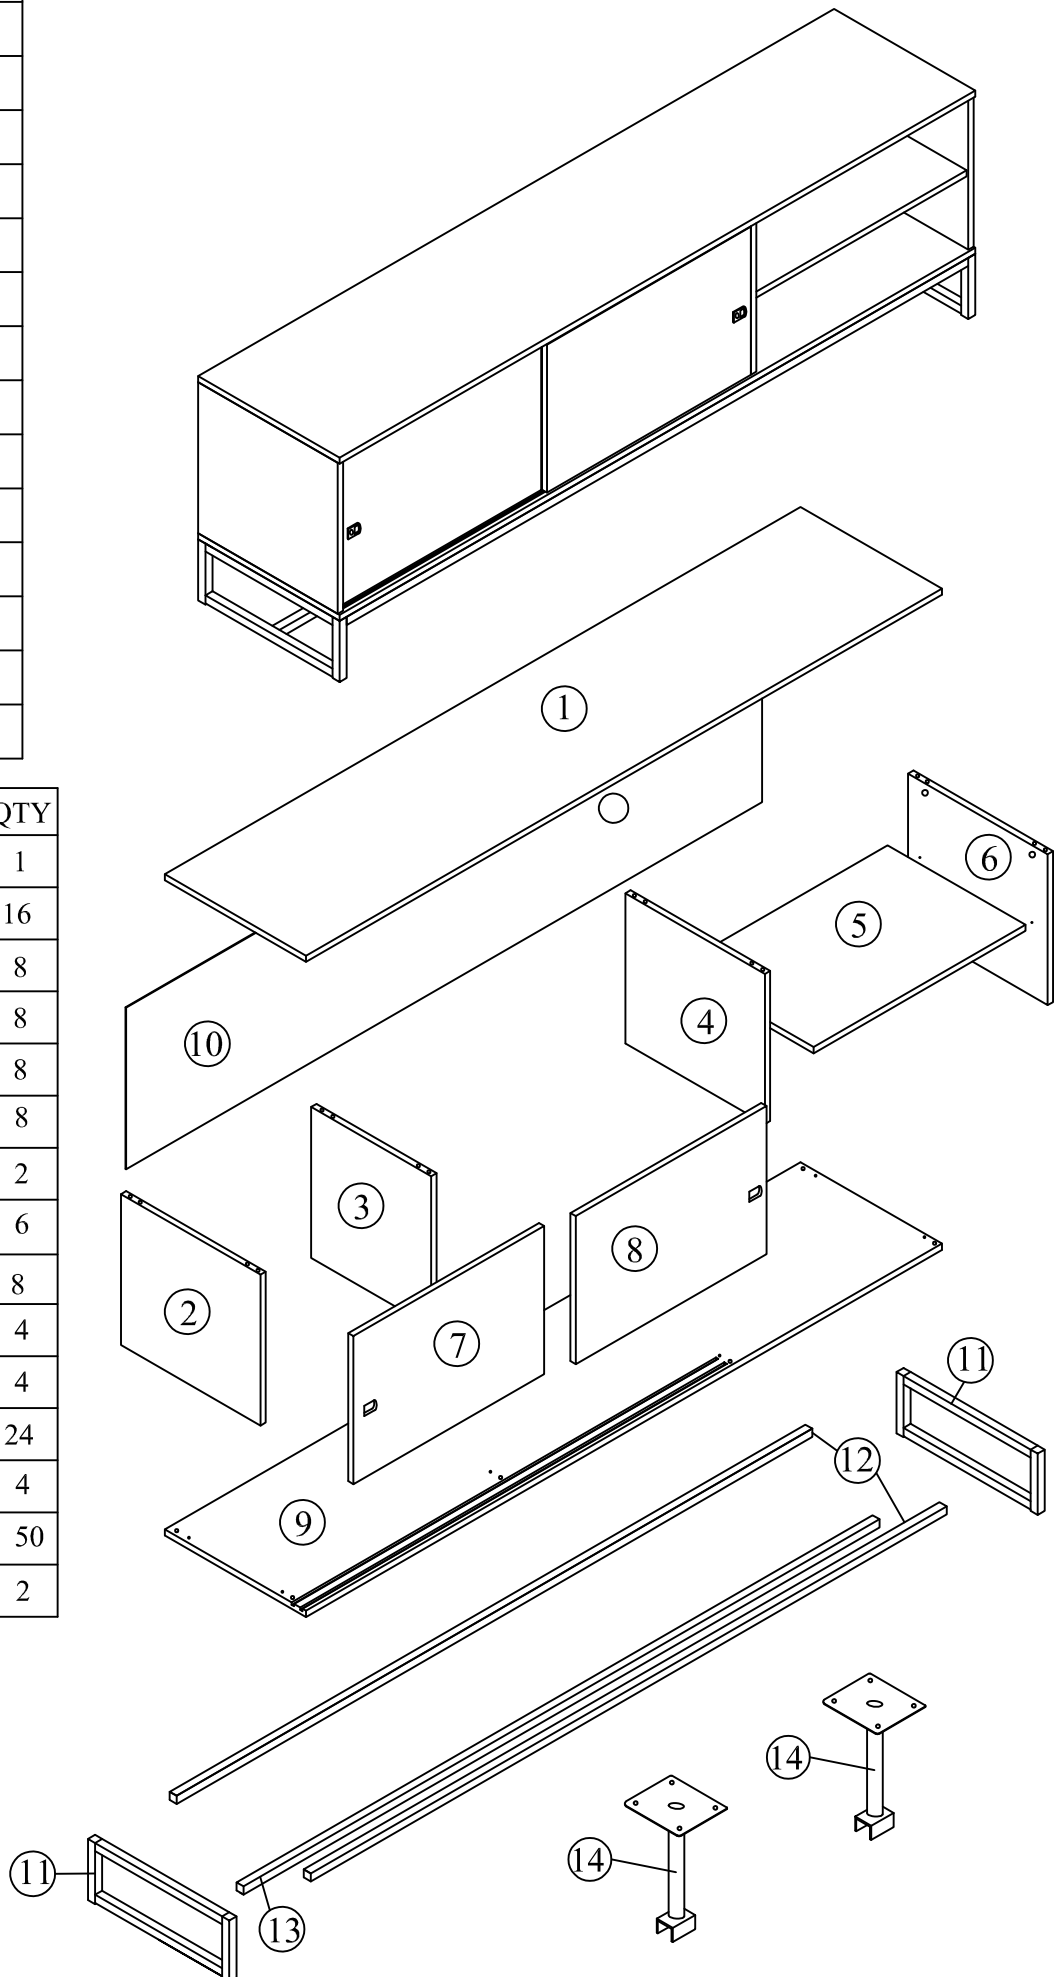 

 
Step 1

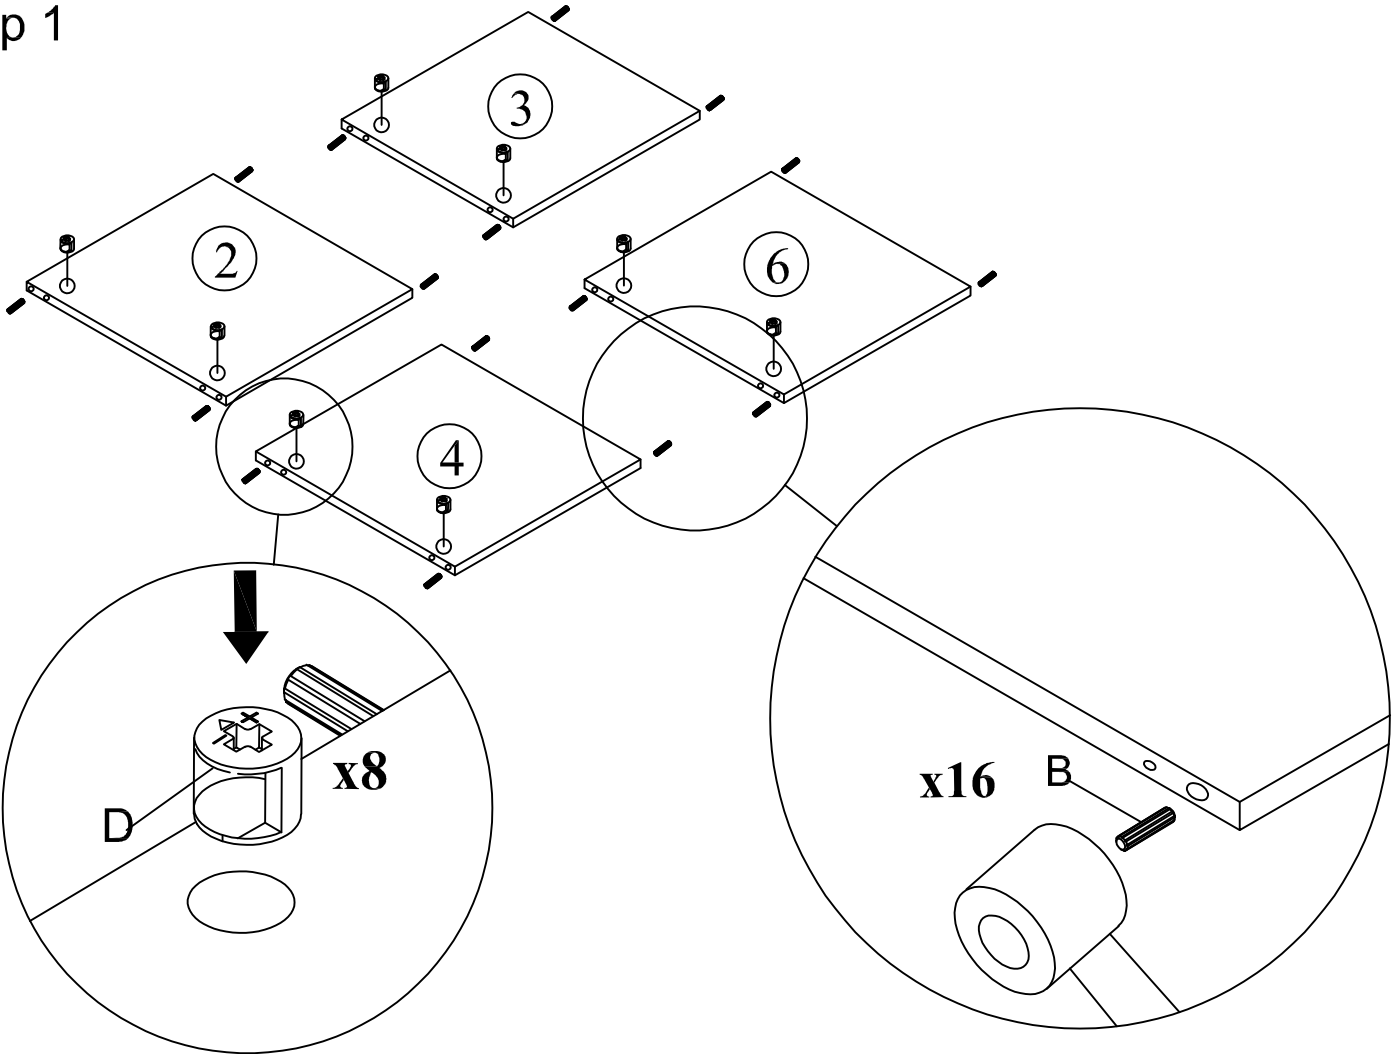

 
Step 2

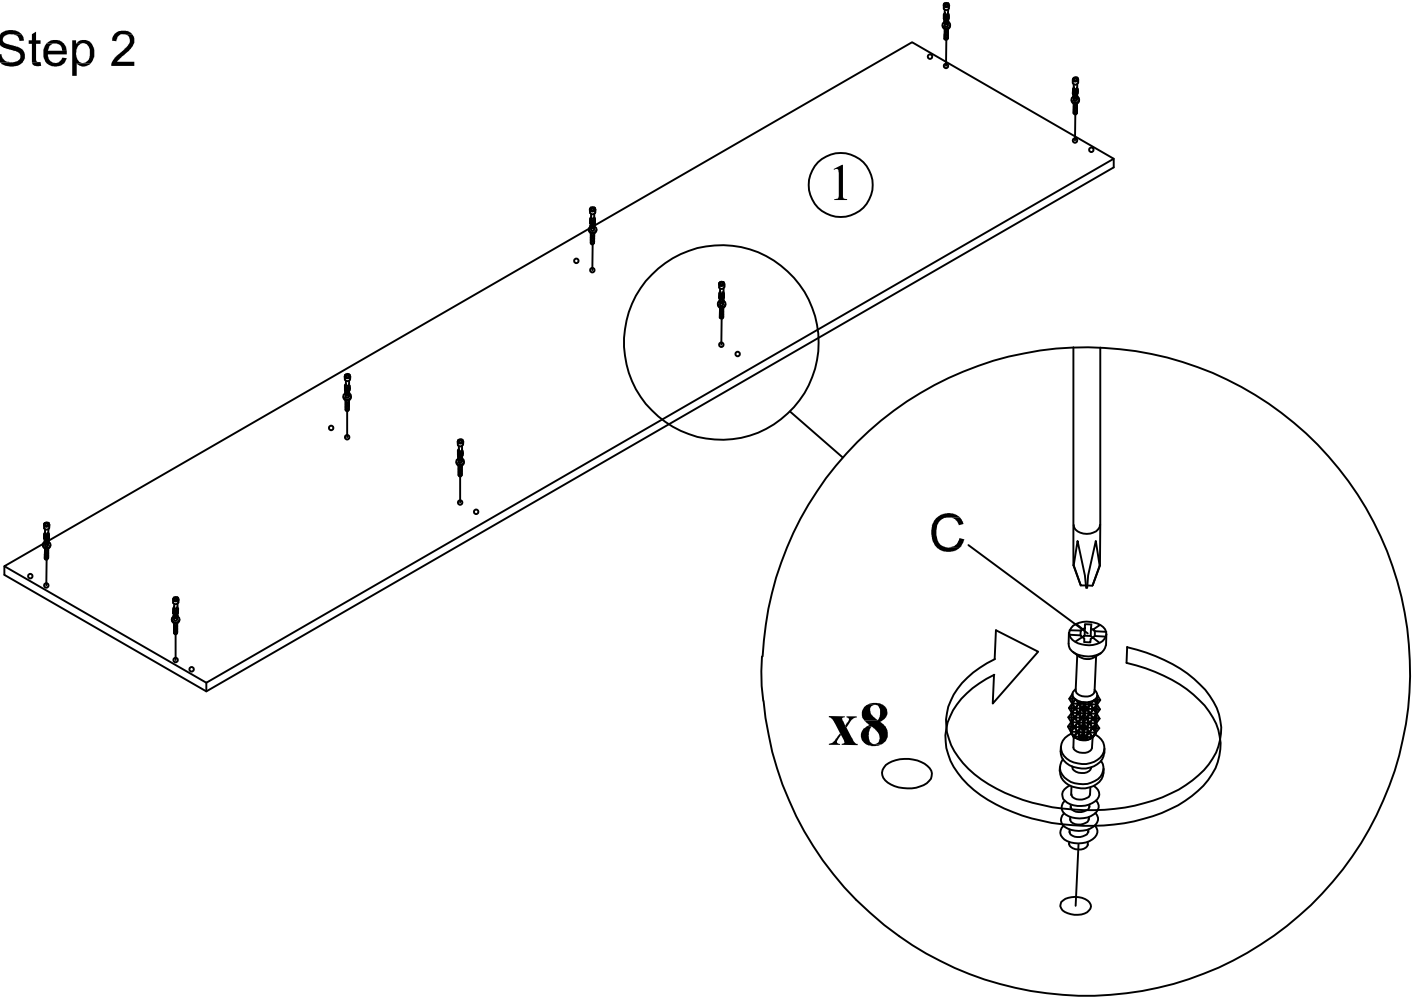

 
Step 3

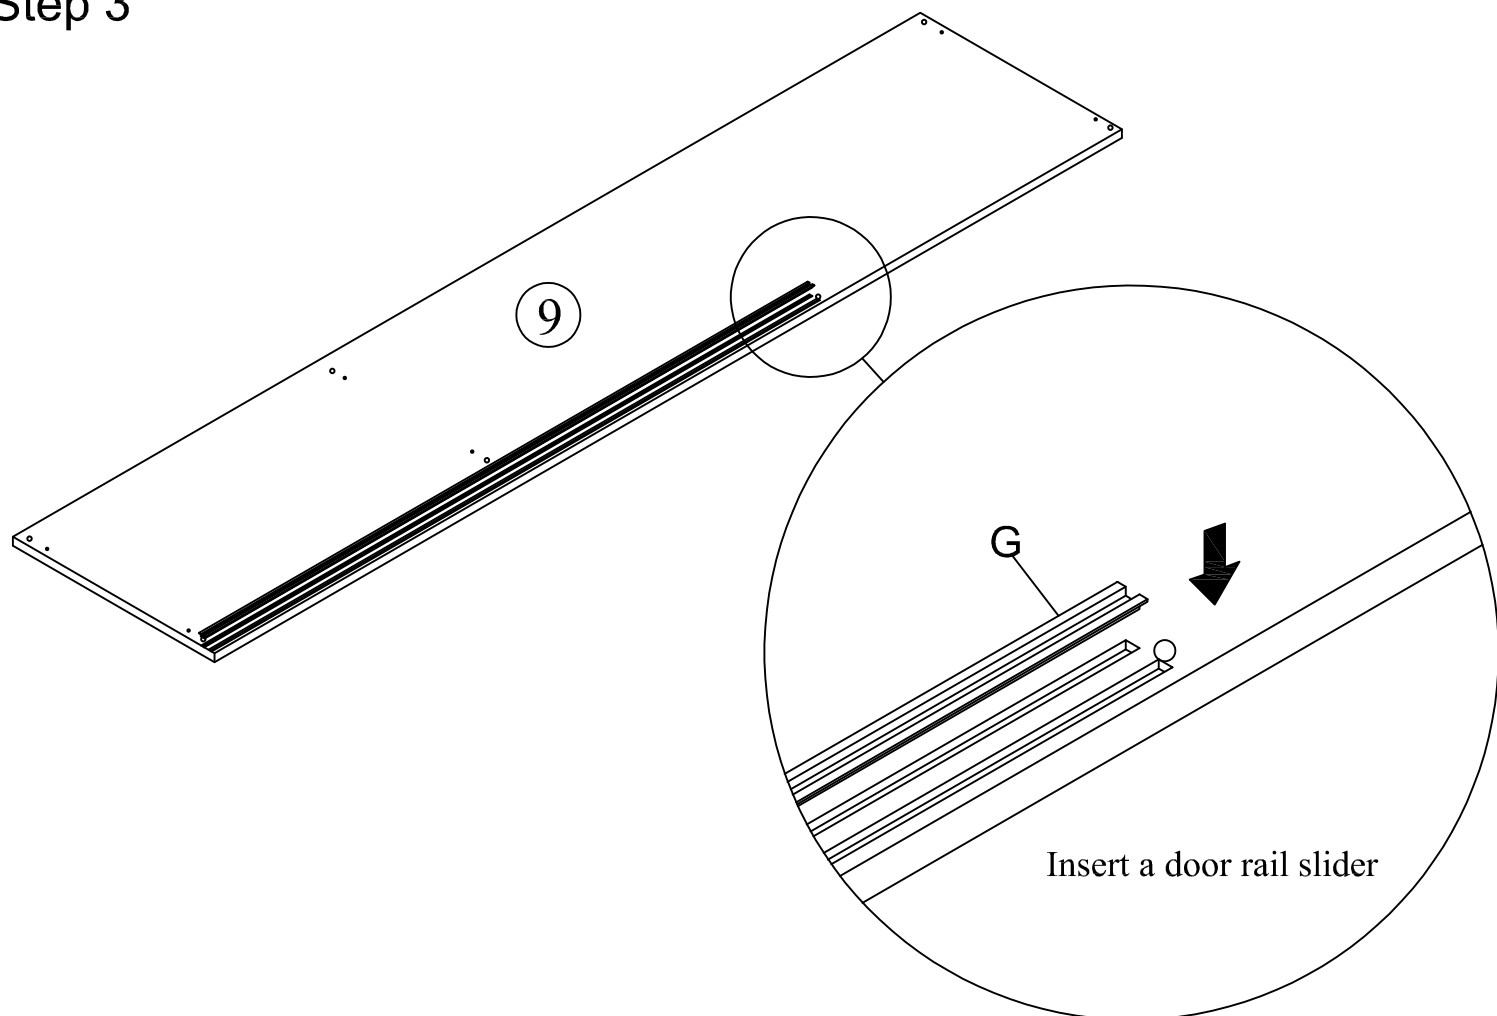

 
Step 4

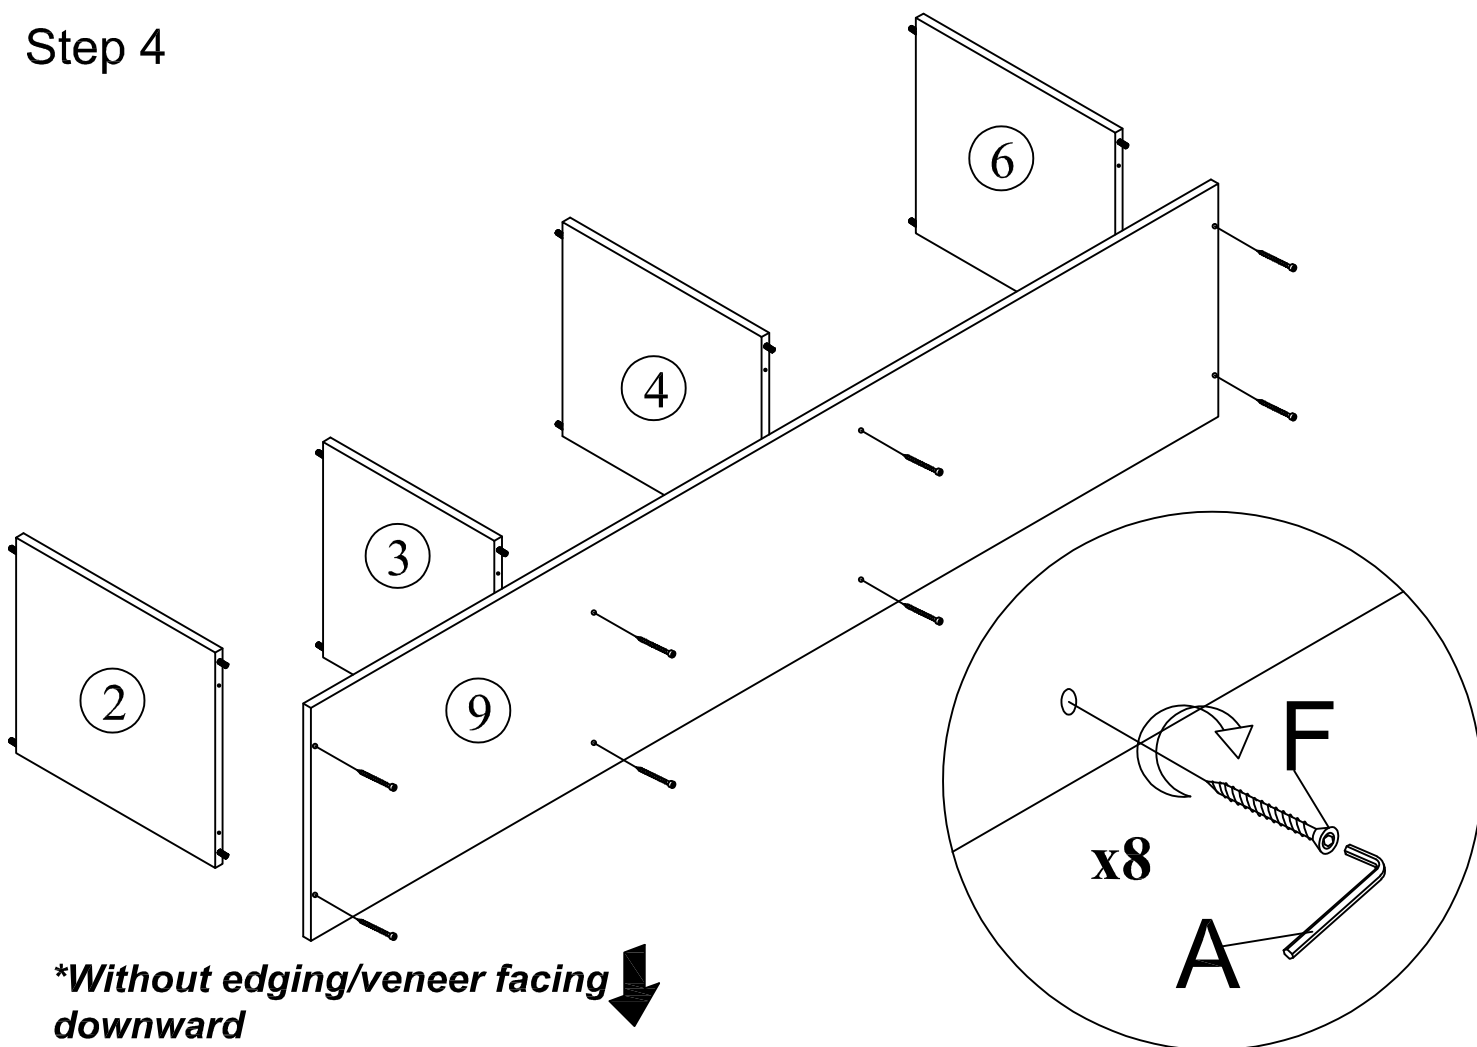

 Step 5

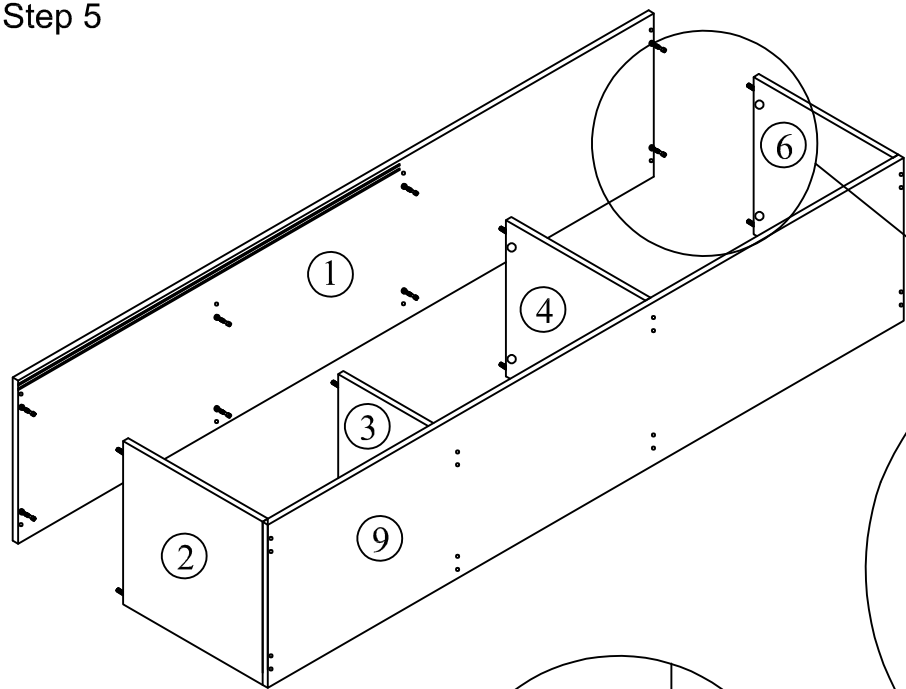


 **Without edging/veneer facing downward*

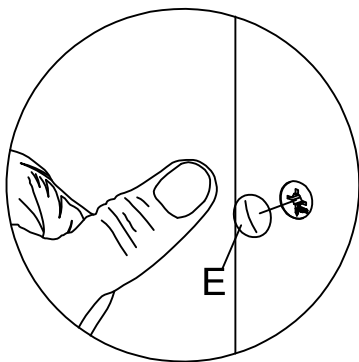


**Attach Minifix Cap as shown.*


 
This is how a mini fix works...

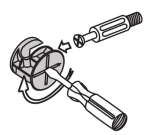

 
The head of the mini fix housing goes into the open mouth of the mini fix bolt. You then turn the mini fix housing so it tightens over the mini fix bolt.

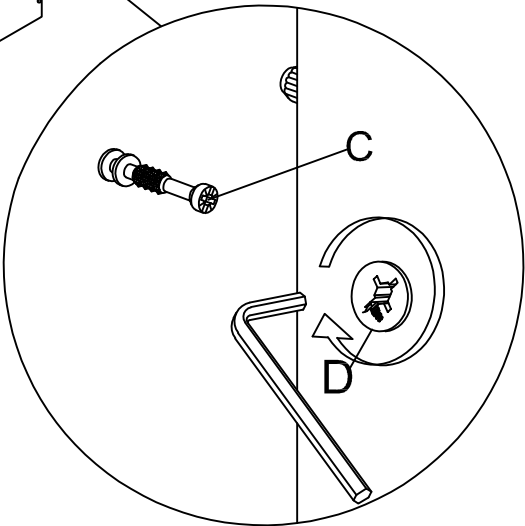

  
Step 6

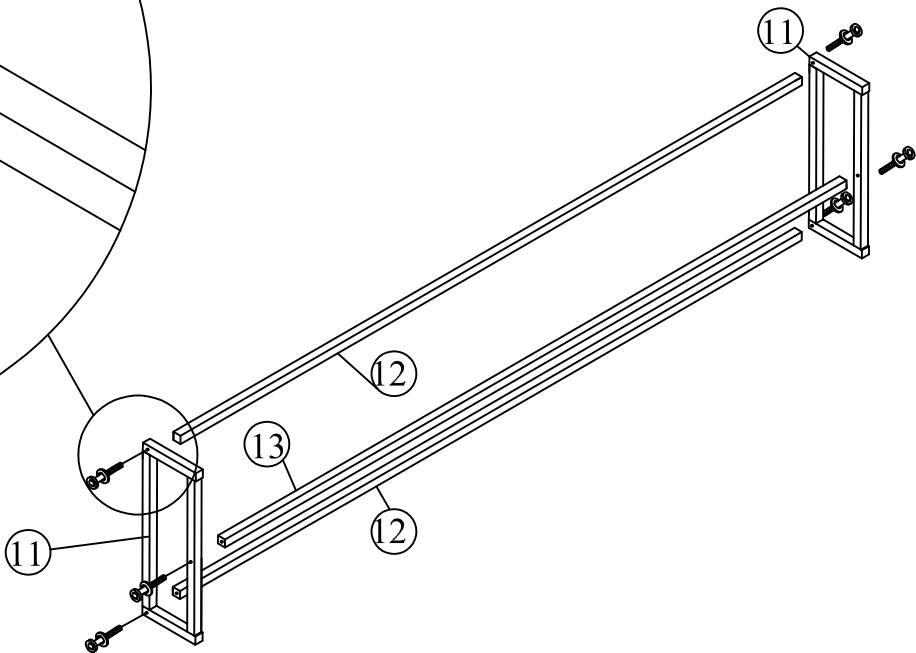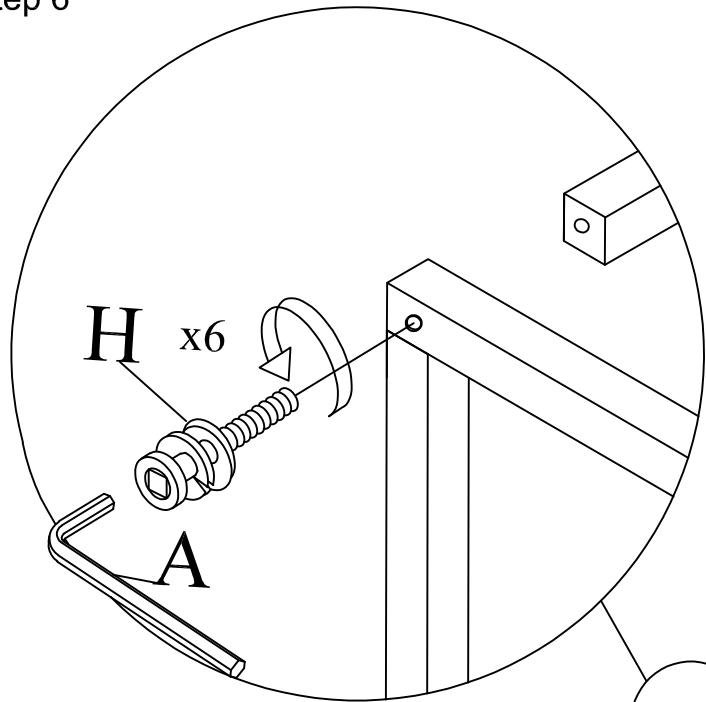

 
Step 7

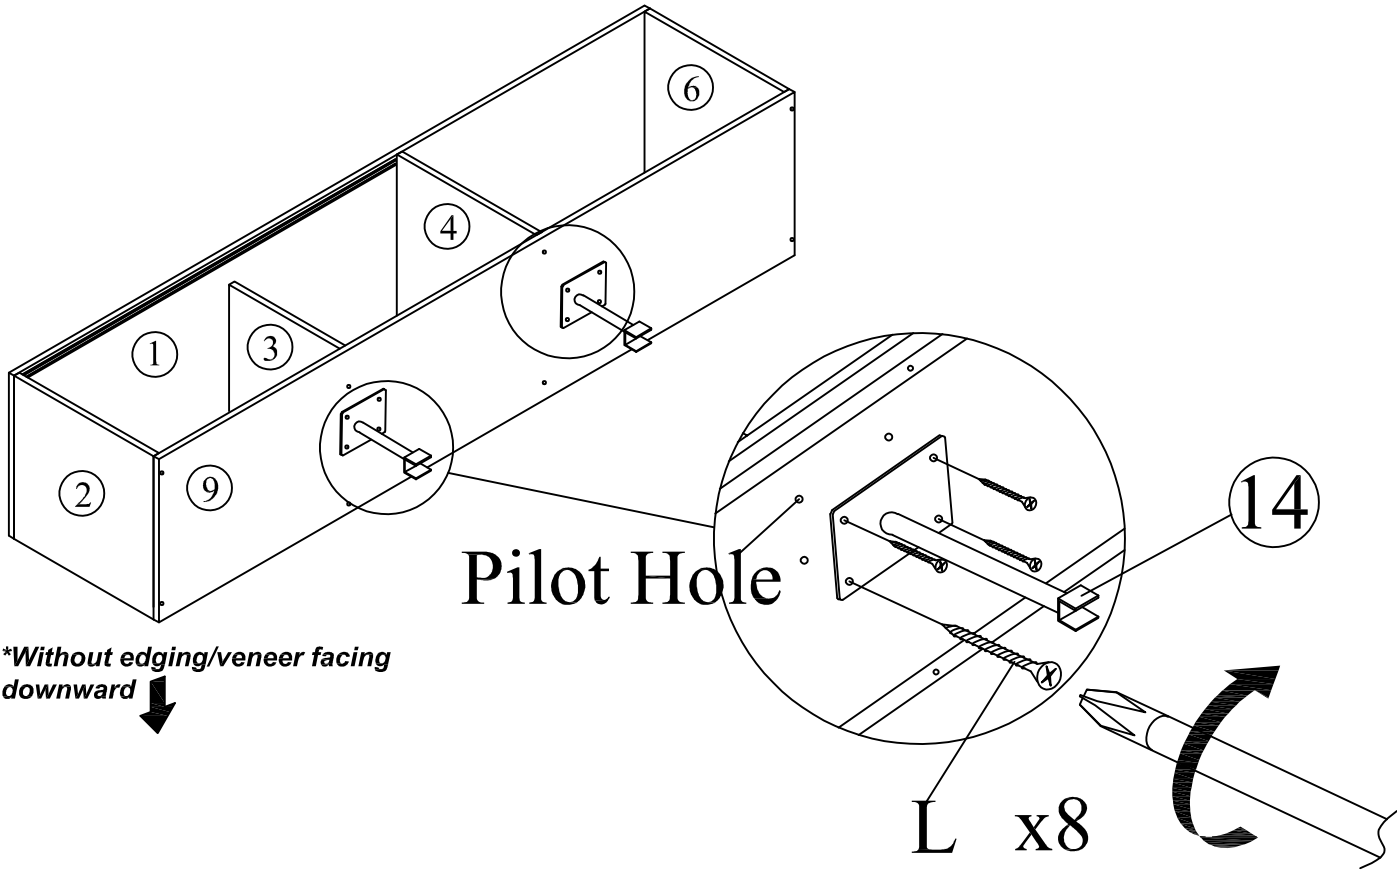

 
Step 8

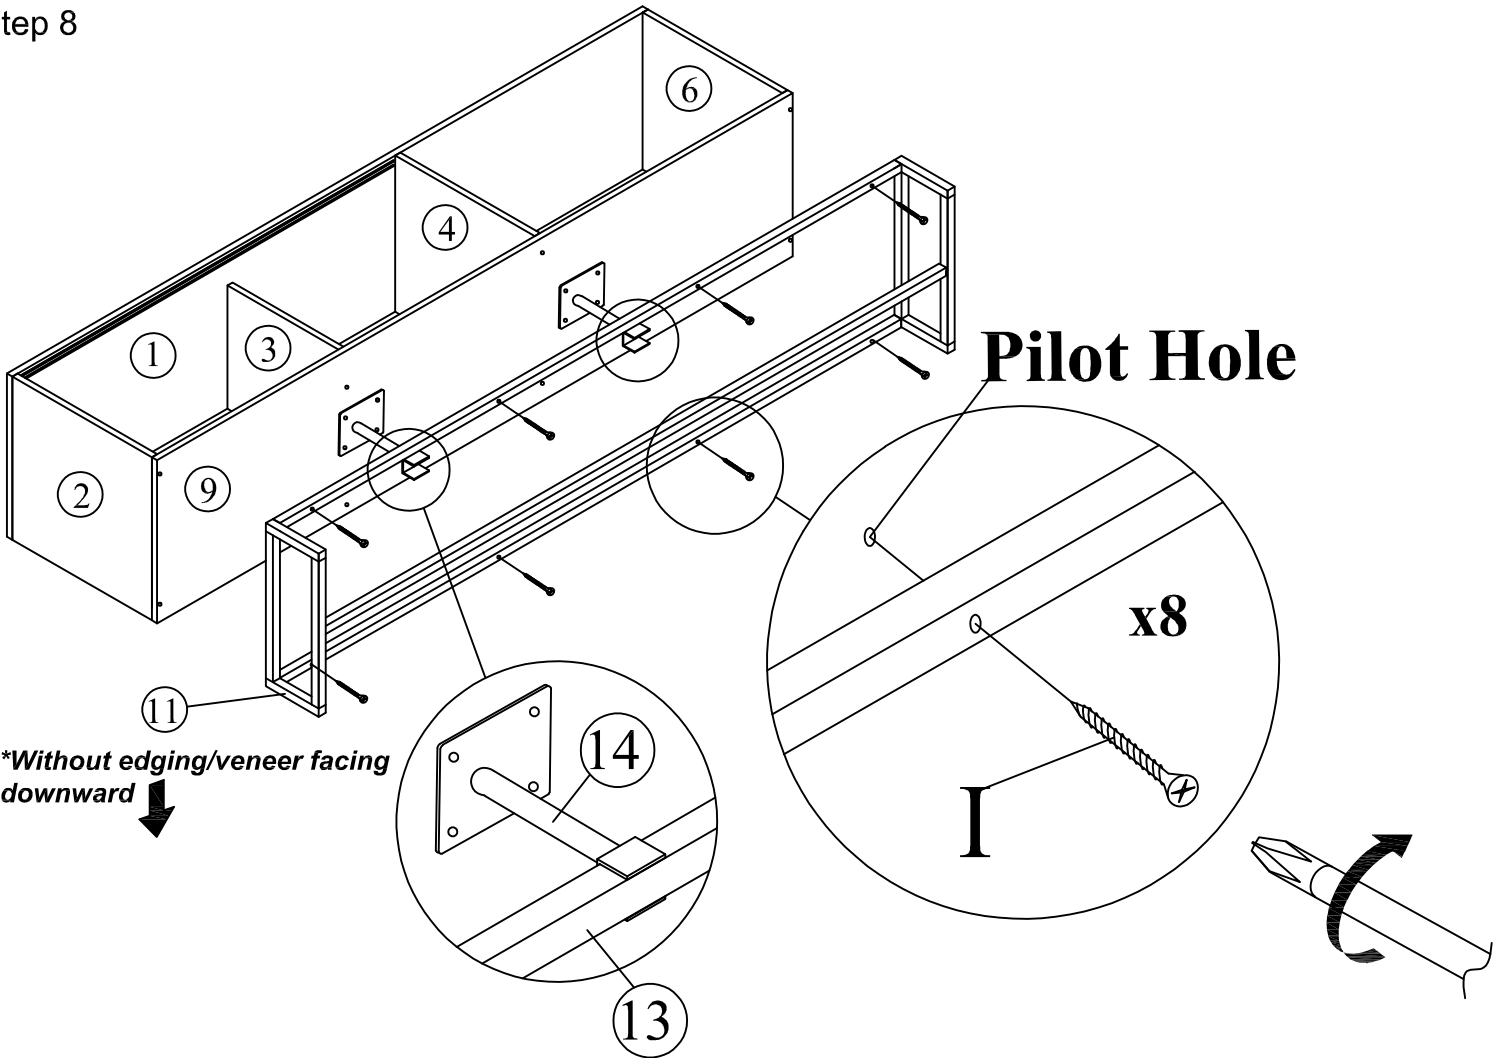

 
Step 9

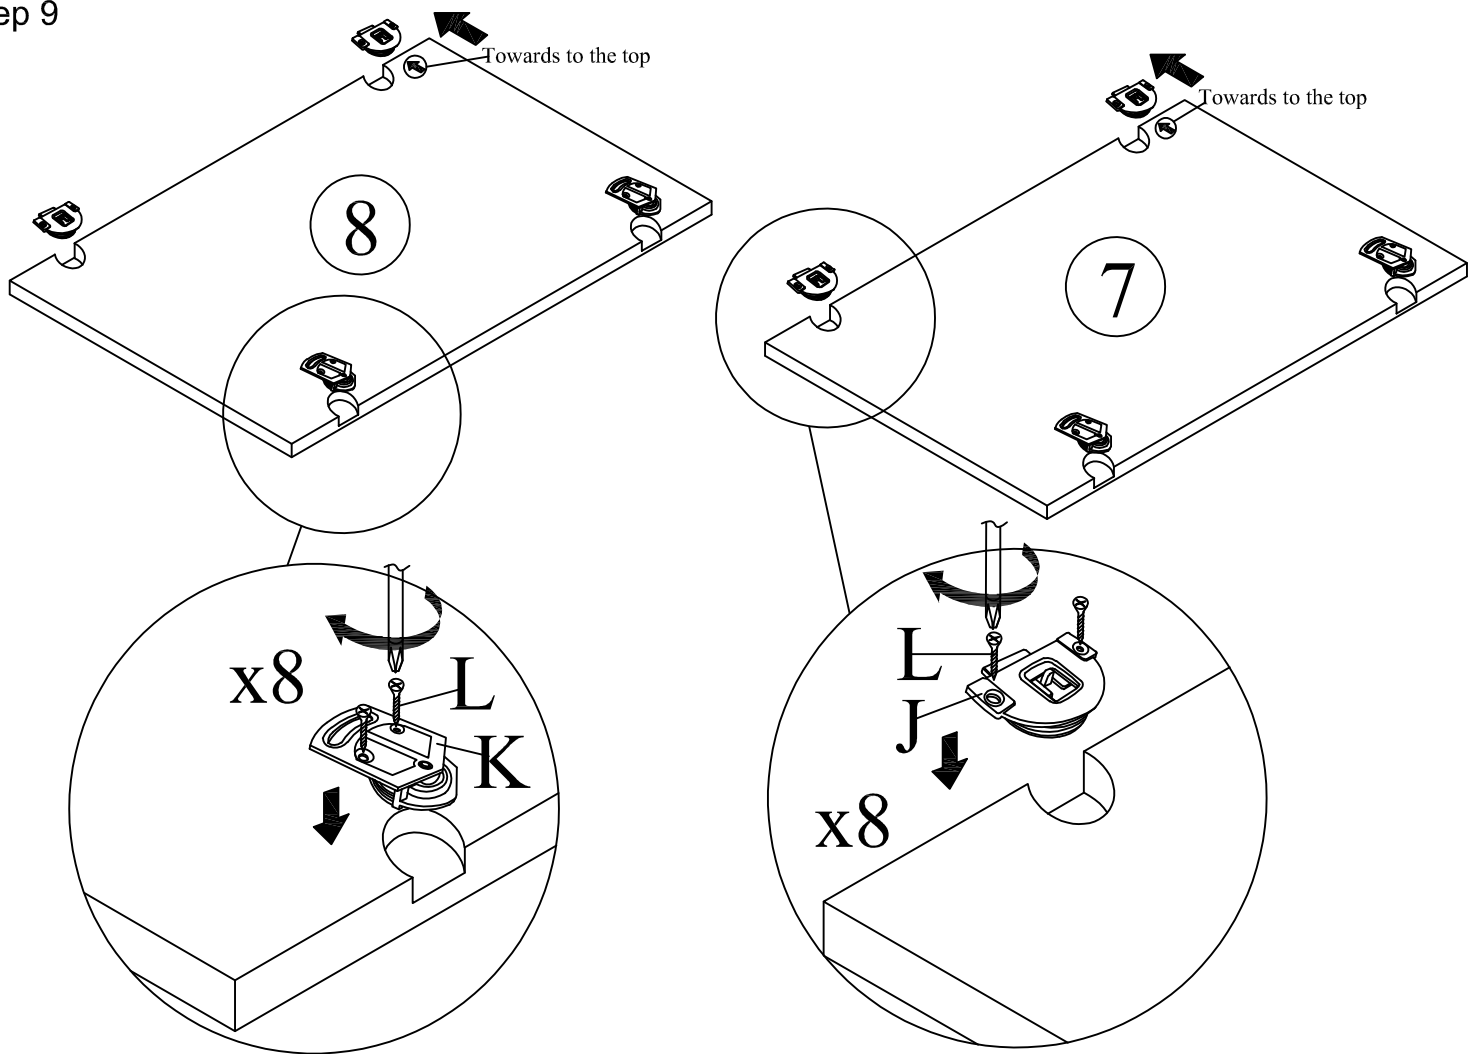

 
Step 10

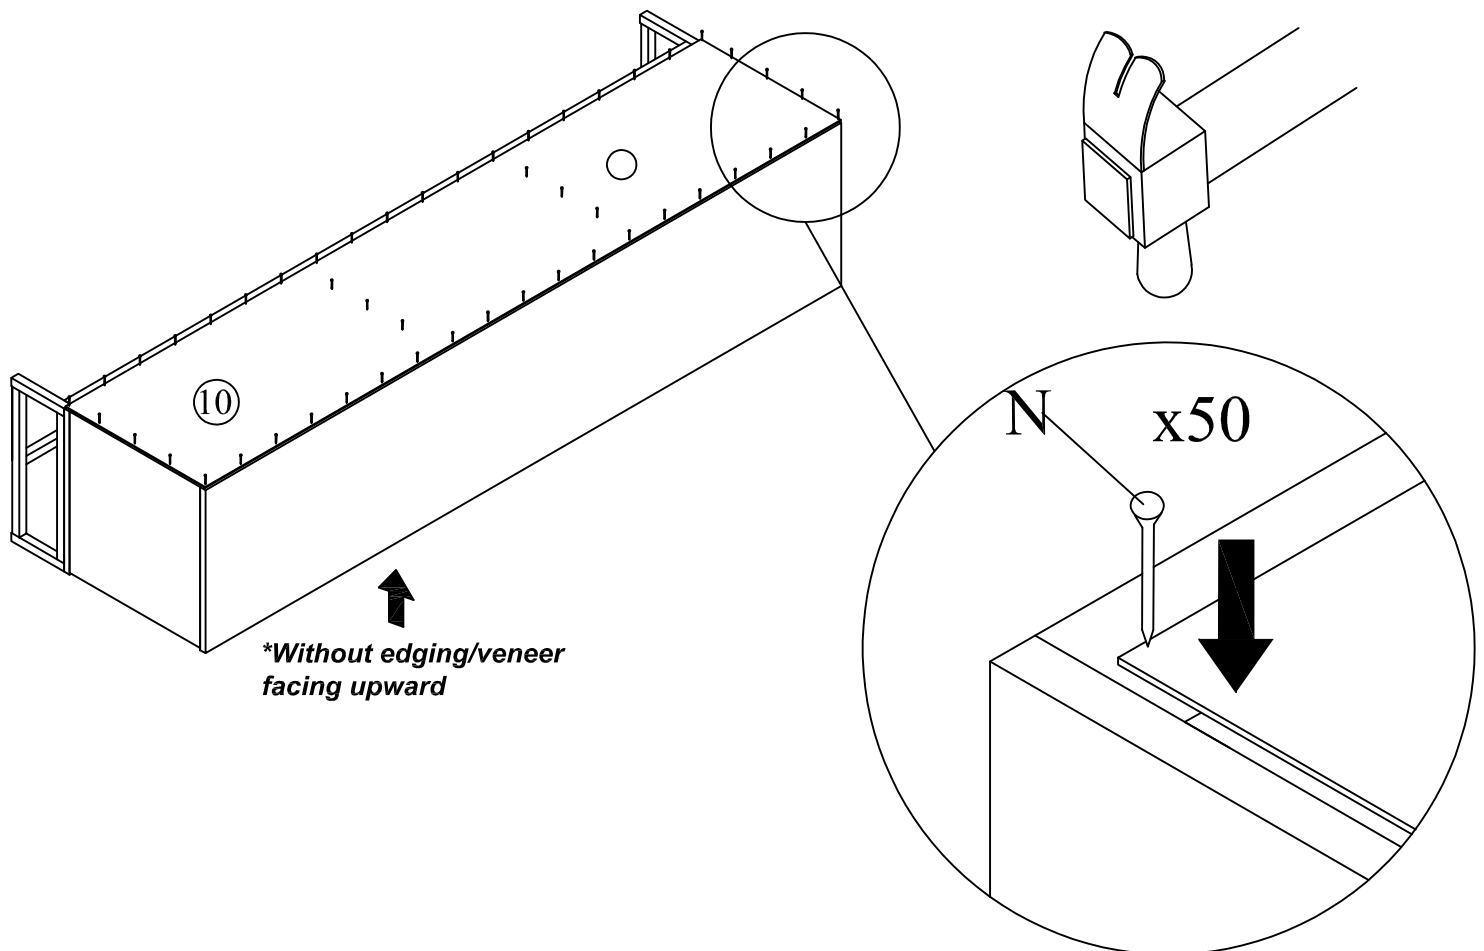

 
Step 11

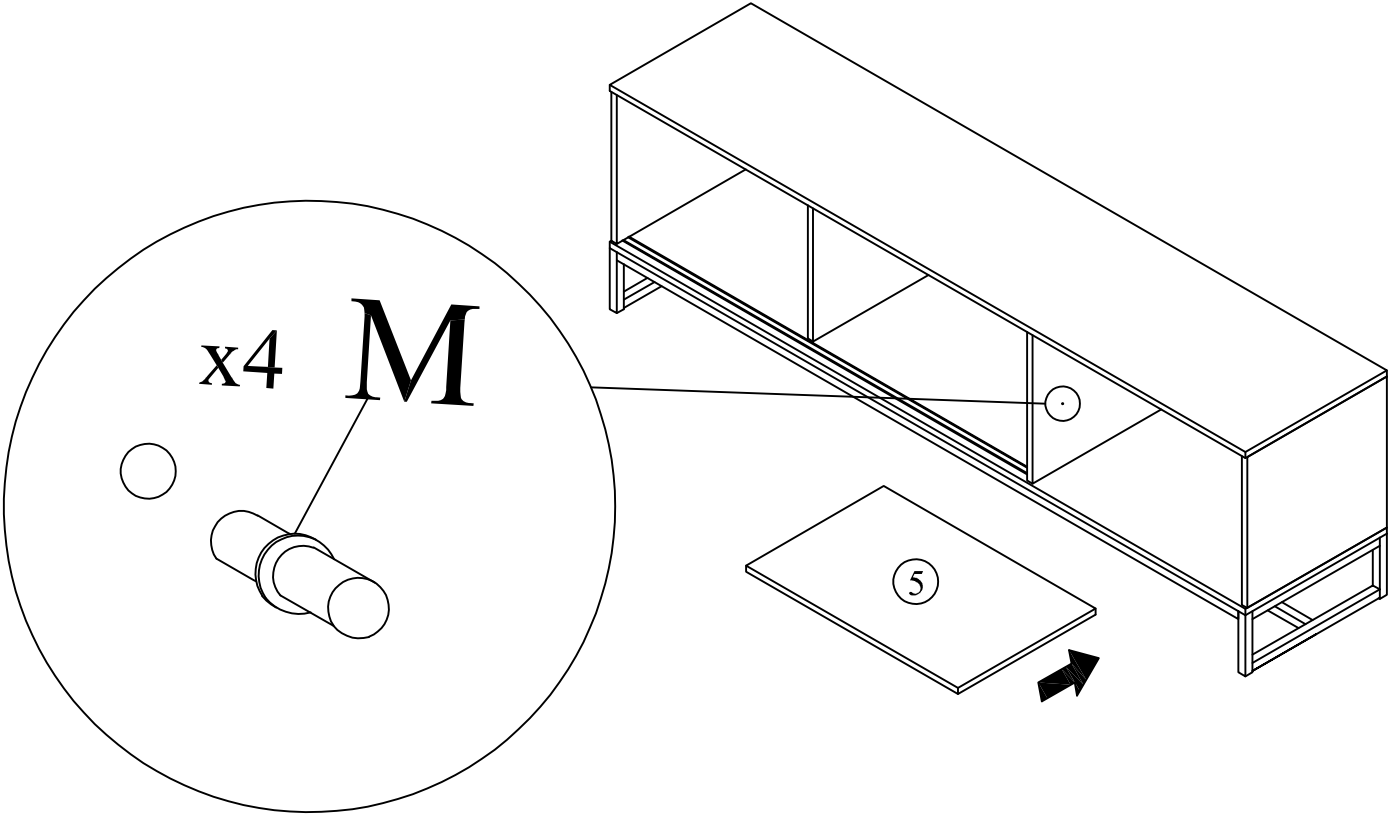

 Step 12

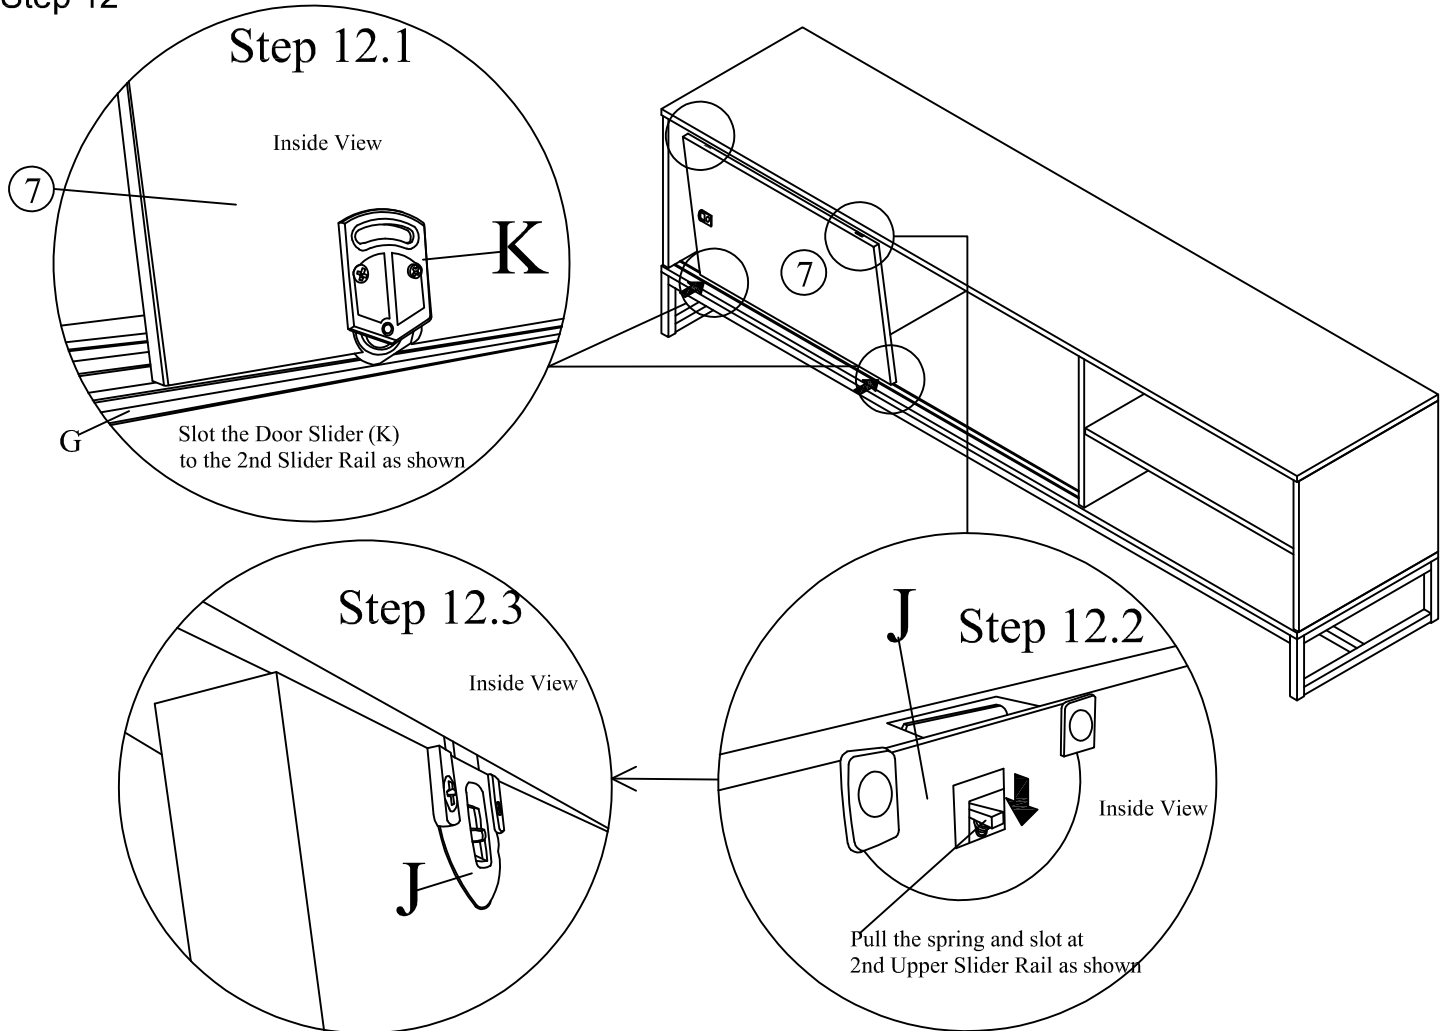

 Step 13

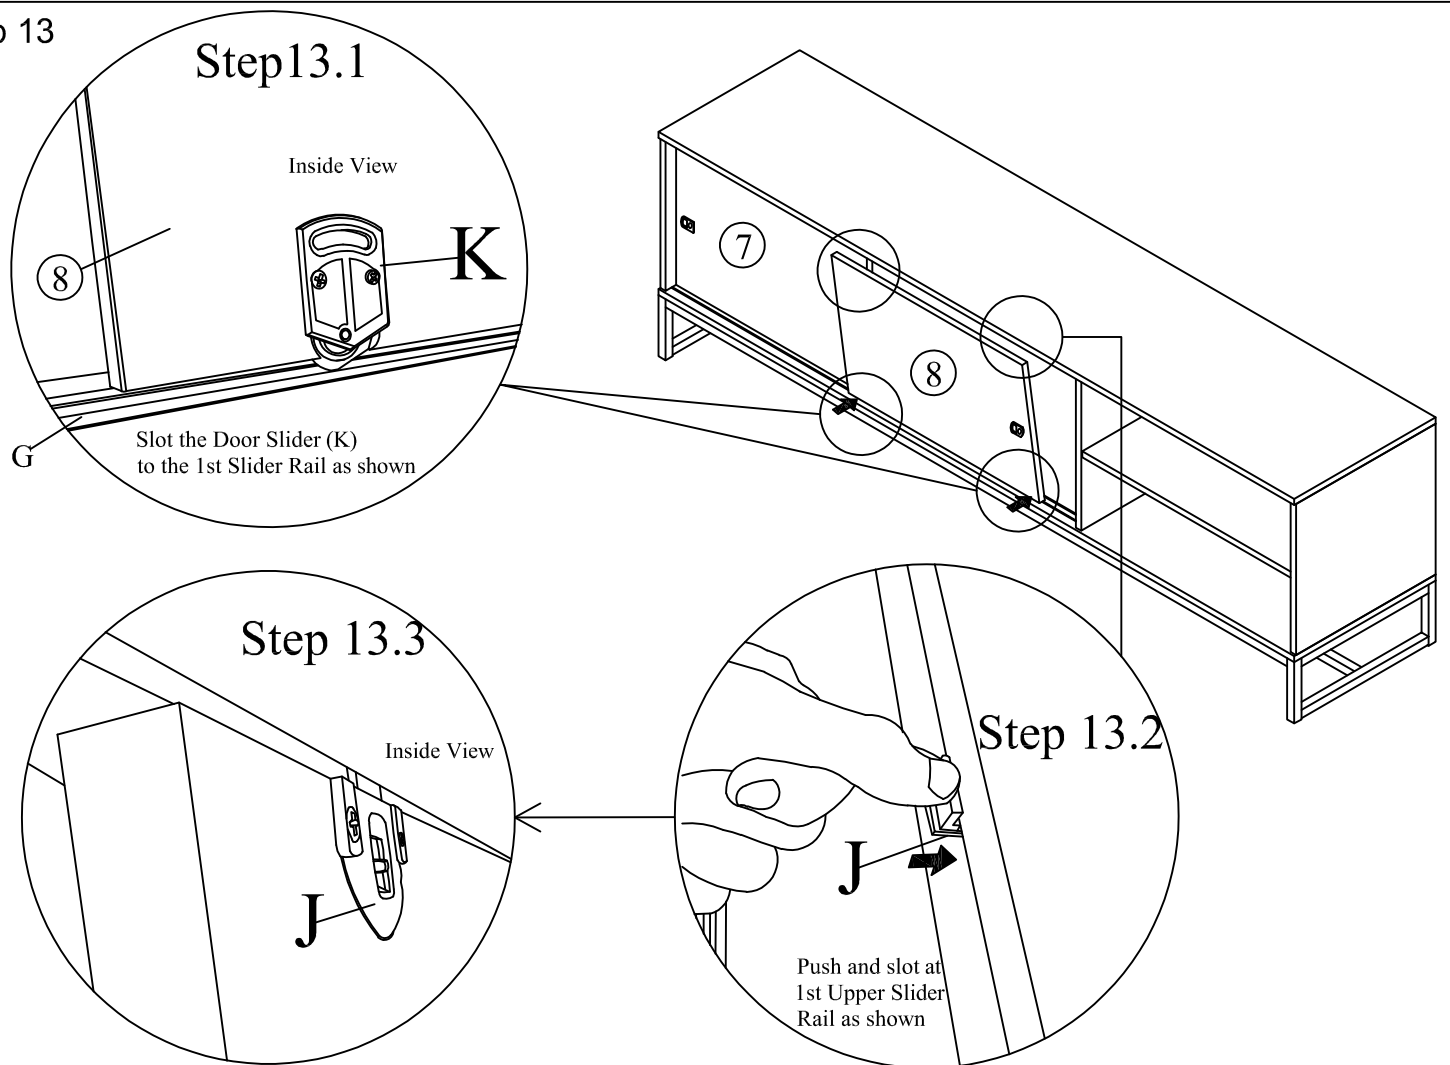

Step 14

